


感谢您购买了电热毛巾架,为了您正确安装和保养本产品,请您在安装前详细阅读此说明书

本说明书适用G688暗装电热毛巾架全系列

A 产品参数:


型号	G688系列
额定功率	40W (2杆)
	60W (3杆)
	80W (4杆)
	100W (5杆)
电压	220v
温控范围	40-65℃
定时范围	01-08H
防水等级	IPX5
安装方式	预埋暗装

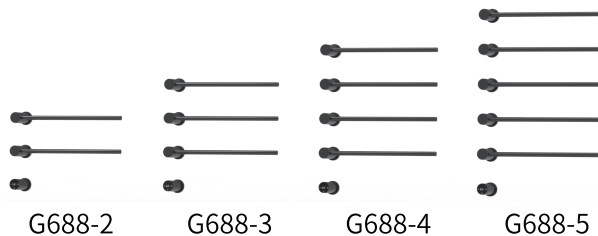

B 产品尺寸:

单位:cm

注:手工测量,误差范围±5%

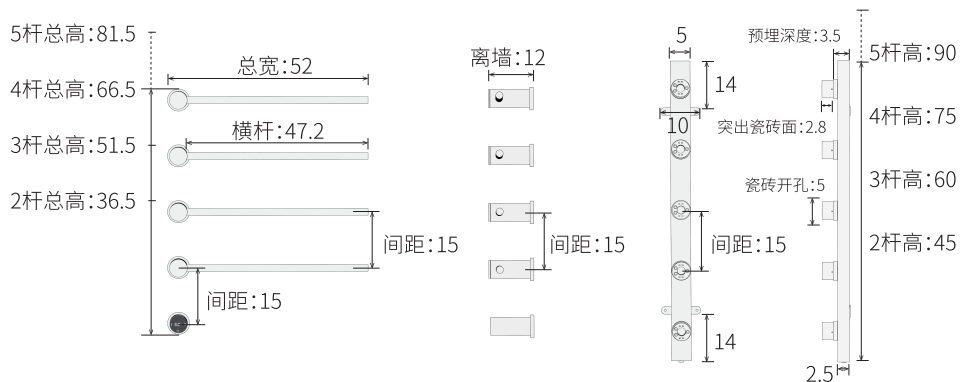


C 使用说明:




1. 轻触开关键, 电热毛巾架开始工作;
2. 长按开关键, 电热毛巾架关机;
3. 轻触温度键, 可调控温度, 调控范围:40-65℃, 每次调整为5℃, 若无手动调整温度, 开机升温至50℃后自动恒温;
4. 轻触定时键, 可设置定时, 定时范围:01-08H, 每次调整为1H
5. 为防止过度加热和节能环保, 本机在未设置定时状态下运行4小时后自动关机

D 安装说明:

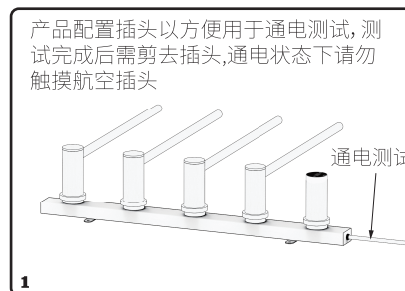


在正式上墙安装前, 请先将产品组装好进行通电测试. 确保无误后, 再进行上墙安装。

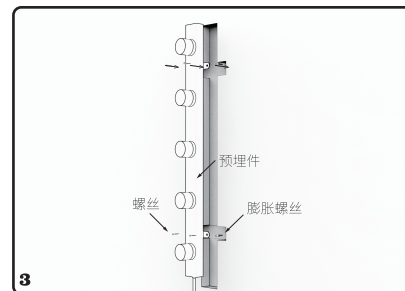


在墙面打入膨胀螺丝, 用螺丝固定预埋件. 切勿取下控件上的橡胶保护套。




根据图示尺寸, 对瓷砖开孔, 铺设瓷砖。

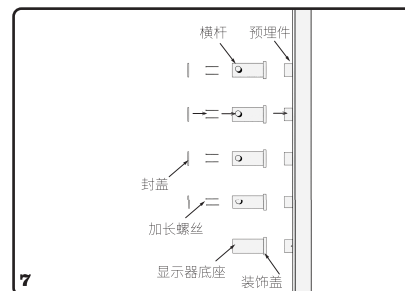


连接底座内部与预埋件上的加热控件, 用螺丝在侧面固定显示器底座及其装饰盖, 用加长螺丝固定横杆底座及其装饰盖, 盖上封盖。

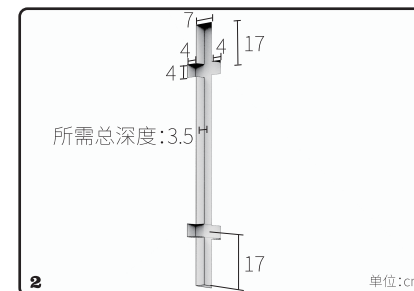


在未铺设瓷砖前, 根据上方尺寸, 在墙面开槽。
▲请根据购买的瓷砖厚度来确定实际开槽深度

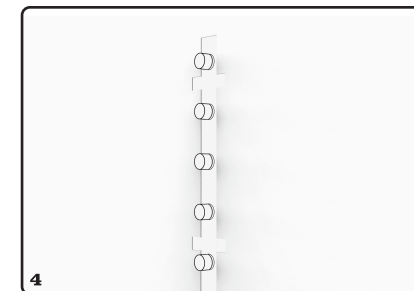

接好预埋件上与墙内预留的电线, 用水泥回填墙面, 覆盖整个预埋件。

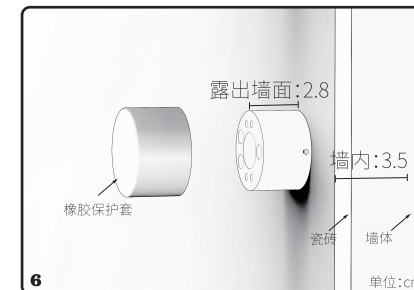

待瓷砖铺设完毕后, 取下橡胶保护套, 检查露出墙面部分与图示相同。

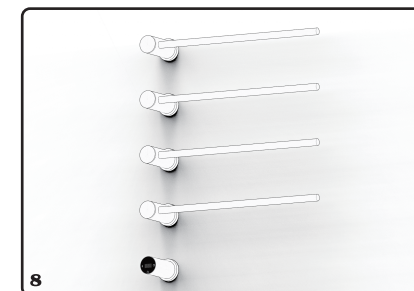

开机测试, 安装完成。

E 保养说明:

- 1、每次清洁烘干机/电热毛巾架前，务必处于关机状态并让电热毛巾架冷却。
 - 2、切勿将烘干机/电热毛巾架、电源线浸入水中。
 - 3、确保电器线路干燥。
 - 4、用湿布擦拭电热毛巾架，然后用干软布擦干。
- 注：切忌用金属球或其他粗硬的擦布清洁毛巾架，以免损伤毛巾架表面。

F 使用注意事项:

- 1、在使用本产品前必须仔细阅读、理解本产品之使用说明；
- 2、本产品仅用于干燥洗的纺织物，丝绸类织物禁止使用本产品来加热烘干；
- 3、产品必须接入与电气铭牌显示的额定电压相符的电源上使用；
- 4、本产品加热元件或外壳损坏时禁止使用；
- 5、产品必须要接地，以免安全隐患和危险；
- 6、在维护或者清理工作没有结束之前，产品一定不能接通电源；
- 7、如果外部的电线装置需要修理，必须彻底切断电源；
- 8、无电气安全操作经验者请在专业人员监督和指导下并保证其安全时使用；
- 9、为避免对婴儿造成伤害，安装时应使得最低的加热架距离地面最少600mm
- 10、本产品安装或使用位置应尽量远离淋浴房、浴缸、或容易被水溅到的地方。
- 11、如果电源软线损坏、为避免危险，请由生产厂家或由有电工资质的维修人员或类似专业人员更换。
- 12、此设备只用于设计使用范围，只能在室内使用；
- 13、塑料包要远离儿童；
- 14、初次使用时，您可能在开始会闻到不适气味，这是正常的情况，之后气味会变弱。

G 售后相关:

维修凭证

本凭证各栏请详填

客户		地址			
姓名		电话		邮政编码	
购买日期		购买地址		卖方电话	
型号		产品条码		包修期	


- 1、本产品在正常使用状态下，整机保修2年。（赠品不在包修范围内）。
- 2、保修期的起始日期以发票的起始日期为准。
- 3、产品自出售之日七日内，发生性能故障，消费者可以选择退货、换货或修理；
产品自售出15日内，发生性能故障，消费者可以选择换货或者修理。
- 4、在保修期间，若有下列之情形恕不免费包修：
--没有按说明书要求使用而造成故障的；
--因自行修理改装导致损坏的；
--因火灾、跌落、膨胀、不当电压造成故障的；
--非一般家庭使用（如长时间使用在恶劣场所或车江、船舶上搭载）所造成之故障或损坏的；
--外观一使用而自然污旧的；
- 5、超过保修期或不属于免费维修的产品，本公司维修中心仍竭诚为您服务。

常见故障与问题

故障现象	原因分析	故障排除
烘干机 / 电热毛巾架 不工作	电源插头没有连接好	请检查电源插头连接情况
	电源线损坏	请专业人士更换电源线

专业售后服务热线：400-718-9186

产品说明书

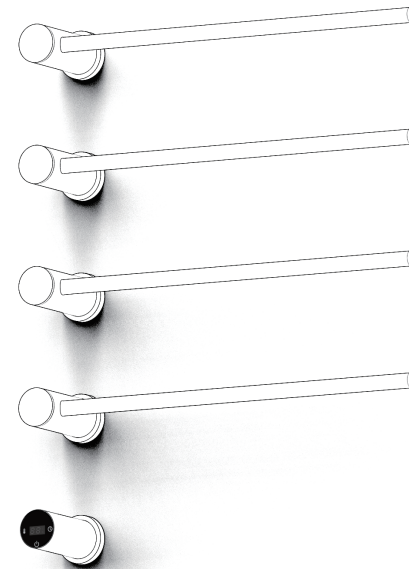


G688系列 全铜暗装电热毛巾架

Thank you for purchasing the electric heating sweater hanger. Please read the instruction before installing this product for your correct installation and maintenance.

This manual is applicable to G688 full series of concealed electric heating towel rack

A Product Parameter:


Model	G688 Series
Rated Powder	40W (2bar)
	60W (3bar)
	80W (4bar)
	100W (5bar)
Voltage	220v
Temperature range	40-65°C
Timing range	01-08H
Waterproof grade	IPX5
Installation	Embedded concealed installation

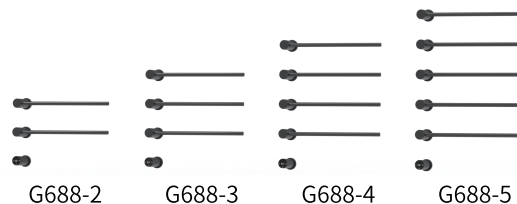


B Product Size:

Unit: cm

Note: Manual Measurement, error range ± 5%

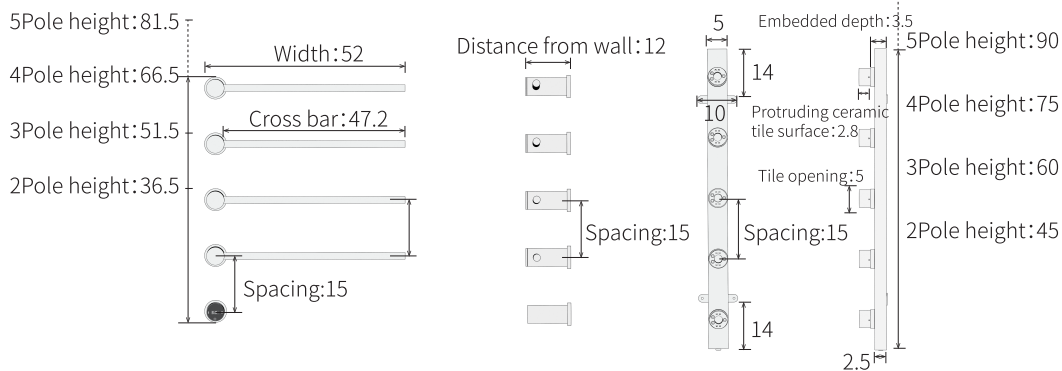


C Use instruction:

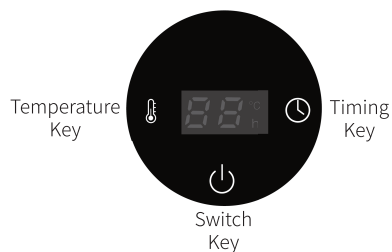


1. Gently touch the key to start the electric towel rack working;
2. Press and hold the key to turn off the electric towel rack;
3. Gently touch the temperature key to adjust the temperature. The control range is 40-65 °C, with each adjustment set to 5 °C. If there is no manual temperature adjustment, the machine will automatically maintain a constant temperature after heating up to 50 °C;
4. Gently touch the timing key to set the timing. The timing range is 01-08H, and each time it is adjusted to 1H.
5. To prevent excessive heating, energy conservation, and environmental protection, this machine automatically shuts down after running for 4 hours without setting the timing.

2


D Installation instructions:

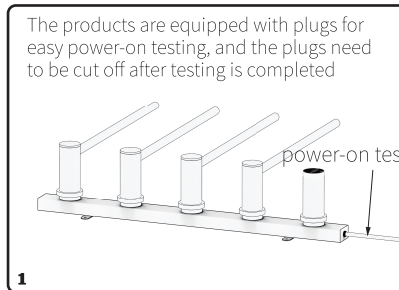


Before officially installing on the wall, please assemble the product and conduct a power on test. After ensuring that there are no errors, proceed with the installation on the wall.

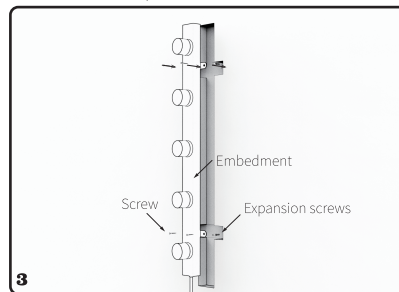


Insert expansion screws into the wall and fix the embedded parts with screws. Do not remove the rubber protective sleeve from the control.

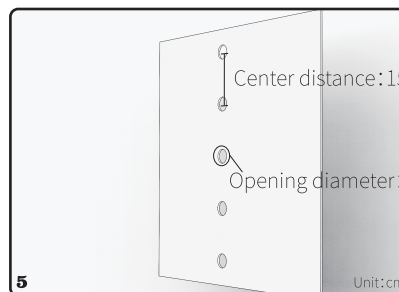


According to the dimensions shown in the diagram, make holes in the tiles and lay them.

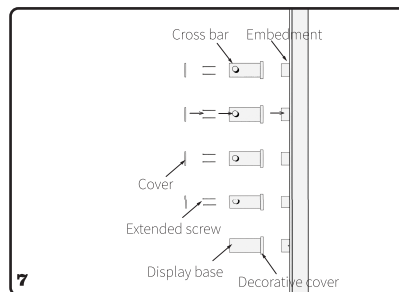


Connect the colored controls inside the base to the embedded parts, secure the monitor base and its decorative cover on the side with screws, secure the crossbar base and its decorative cover with extended screws, and cover the cover.

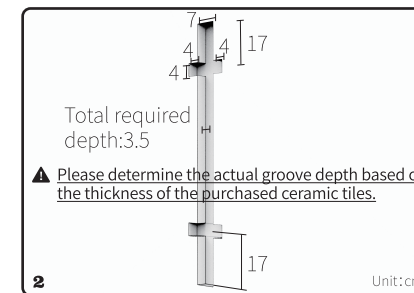

Before laying tiles, groove the wall according to the dimensions above.

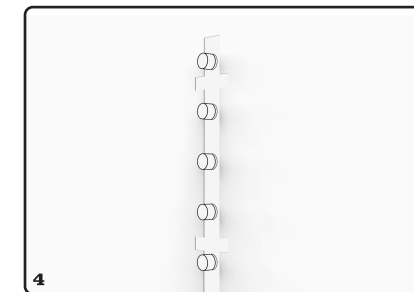

Connect the wires reserved on the embedded parts and inside the wall, backfill the wall with cement, and cover the entire embedded part.

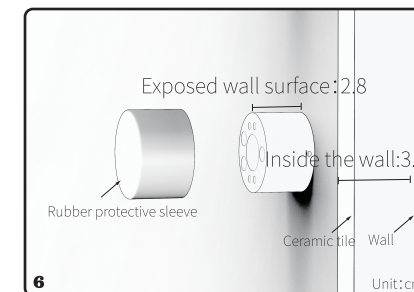

After the tiles are laid, remove the rubber protective cover and check that the exposed part of the wall is the same as shown in the diagram.



Boot test, installation completed.

3

E Maintenance Instructions:

1. Before cleaning the dryer/electric towel rack, be sure to turn it off and let the electric towel rack cool down;
2. Do not immerse the dryer/electric towel rack or power cord in water;
3. Ensure that the electrical wiring is dry;
4. Wipe the electric towel rack with a damp cloth, and then dry it with a dry soft cloth.

Note: Do not use metal balls or other rough and hard wiping cloths to clean the towel rack to avoid damaging the surface of the towel rack.

F Usage Considerations:

1. Before using this product, it is necessary to carefully read and understand the instructions for using this product;
2. This product is only used for dry washed textile fabrics. It is prohibited to use this product for heating and drying silk fabrics;
3. The product must be connected to a power supply that matches the rated voltage displayed on the electrical nameplate for use;
4. Do not use this product when the heating element or shell is damaged;
5. The product must be grounded to avoid safety hazards and dangers;
6. Before the maintenance or cleaning work is completed, the product must not be connected to the power supply;
7. If the external wiring device needs to be repaired, the power supply must be completely cut off;
8. For those without Electrical safety operation experience, please use it under the supervision and guidance of professional personnel to ensure its safety;
9. To avoid injury to infants, when installing, the lowest heating bracket should be at least 600mm away from the ground;
10. The installation or use position of this product should be as far away from shower rooms, bathtubs, or areas that are easily splashed with water as possible;
11. If the power cord is damaged, to avoid danger, it should be replaced by the manufacturer or a qualified electrician or similar professional;
12. This device is only used for the design scope and can only be used indoors;
13. Keep plastic bags away from children;
14. When using it for the first time, you may initially smell an uncomfortable odor, which is normal, but the odor will weaken afterwards

G after-sales related:

Repair Certificate

Please fill in the details in each column of this voucher

Customer name	Address			
	TEL.		Postal code	
Date of purchase	Purchase address		Tel. of seller	
Model	Product bar code		Warranty period	

1. This product has a 2-year warranty under normal use. (Gifts are not within the scope of repair).
2. The start date of the warranty period shall be based on the start date of the invoice.
3. Within seven days from the date of sale, if a performance malfunction occurs, consumers can choose to return, exchange, or repair the product; Within 15 days after the product is sold, if a performance malfunction occurs, consumers can choose to exchange or repair it.
4. During the warranty period, if there are any of the following situations, the repair will not be free of charge:
 - Failure to use according to the instructions and cause malfunctions;
 - Damage caused by self-repair and modification;
 - Malfunctions or damages caused by non-ordinary household use (such as prolonged use in harsh areas, vehicles, or ships)
 - Appearance - naturally stained due to use;
5. For products that exceed the warranty period or do not belong to free repair, our company's repair center is still dedicated to serving you.

Common failures and problems


Failure phenomena	Cause analysis	Troubleshooting
Dryer/Electric towel rack does not work	The power plug is not connected well	Please check the power plug connection
	Power cord damage	Please replace the power cord by professionals

After-sales service hotline: 400-718-9186

Manual copyright of this product belongs to the company.

The company reserves the right to change the installation instructions without prior notice.

Product Manual

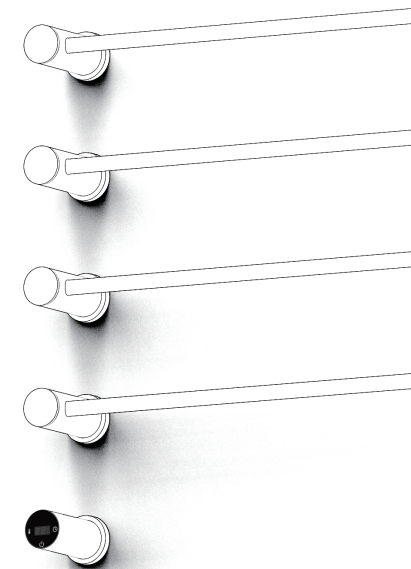

G688 Series

COPPER CONCEALED ELECTRIC HEATING TOWEL RACK